#1406

Sackett Potatoes

6RSPW

11/21/17
1906

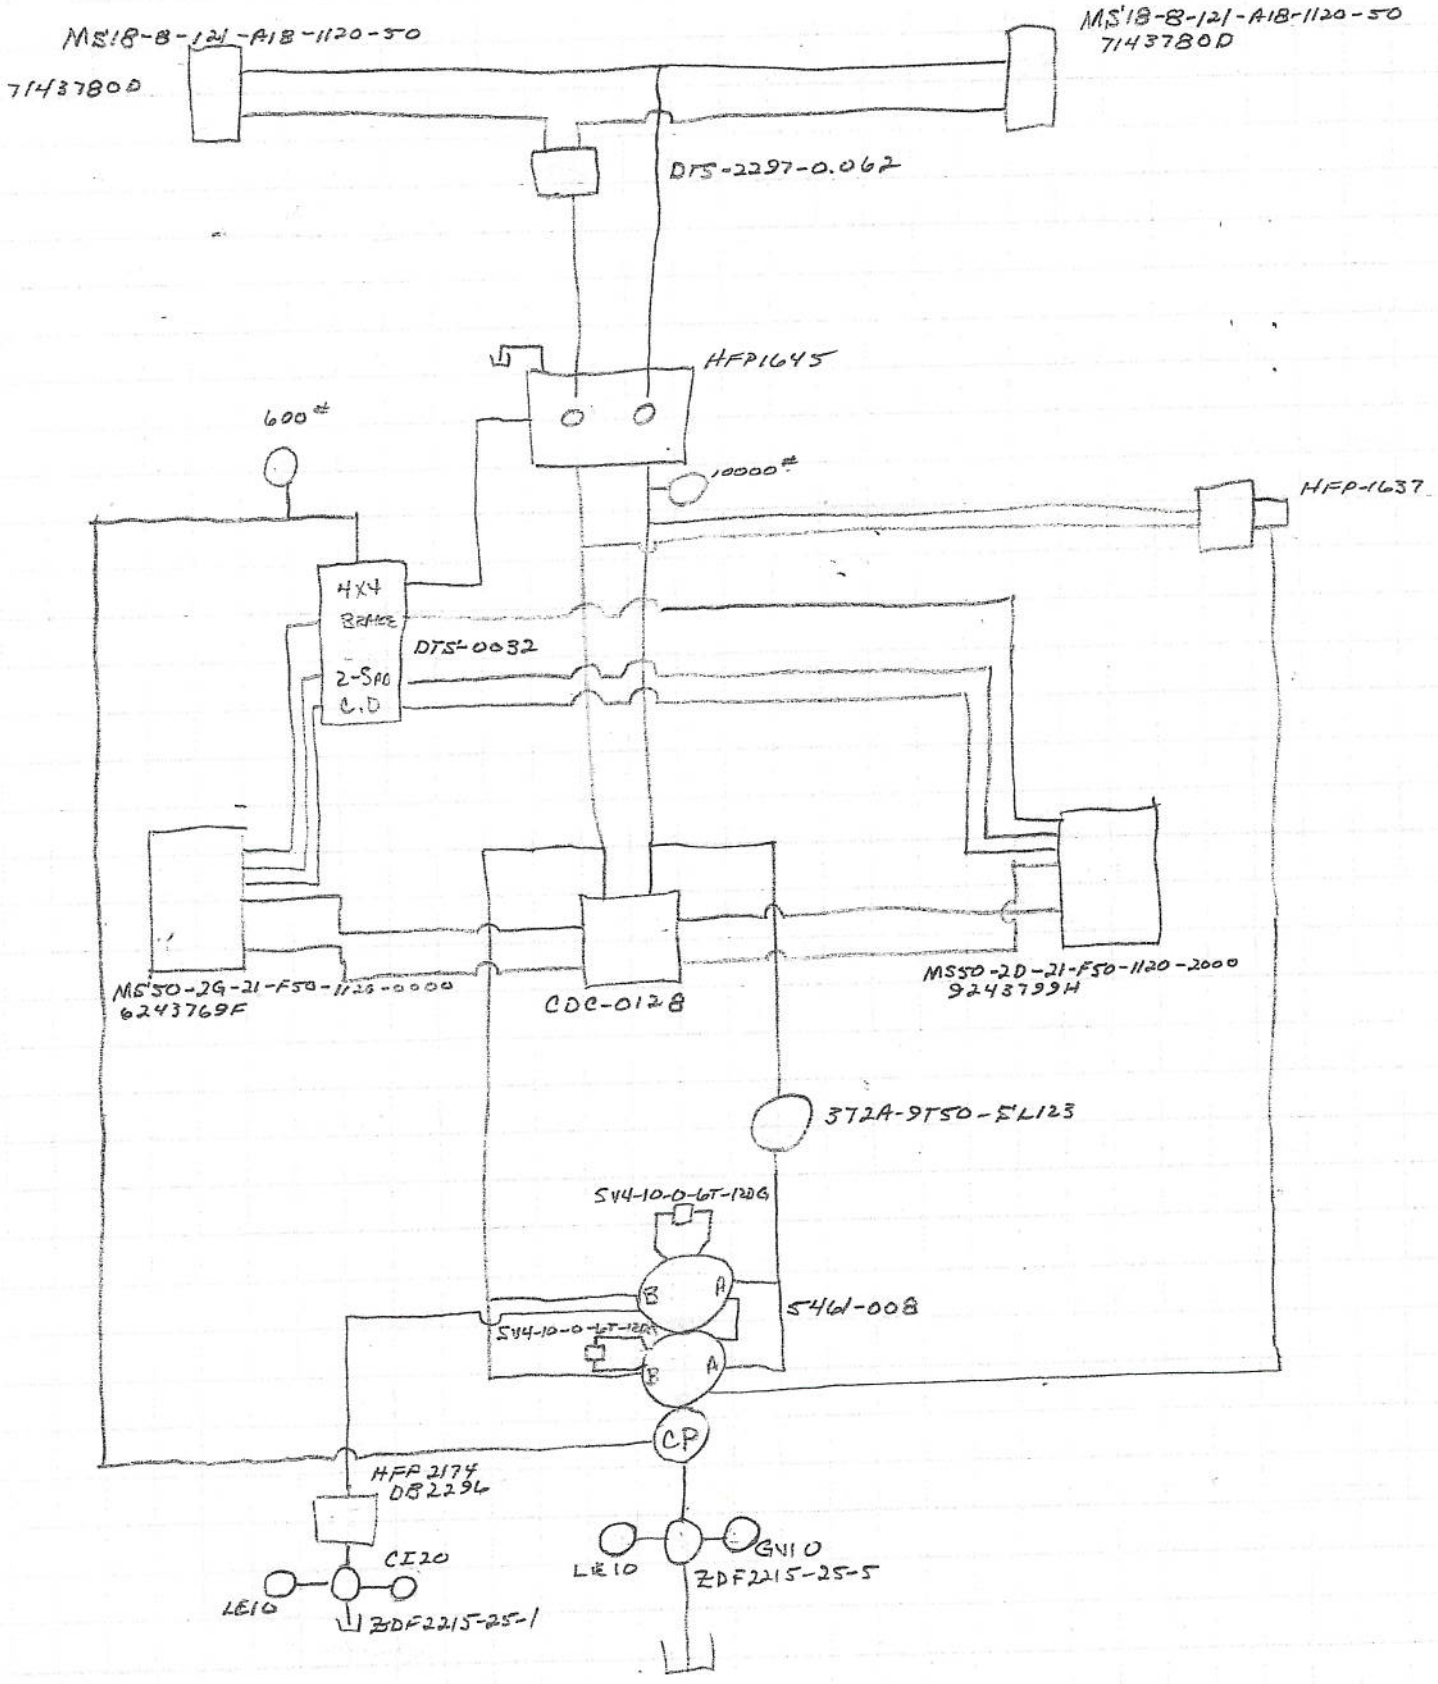
MS18-8-121-A18-1120-50
71437800
MS18-8-121-A18-1120-50
71437800
DTS-2297-0.062
HFP1645
600#
10000#
HFP-1637
4X4
Brake
2-Spd
C.D
DTS-0032
MS50-2G-21-F50-1120-0000
6243769F
CDC-0128
MS50-2D-21-F50-1120-2000
9243799H
372A-9T50-EL123
SV4-10-0-6T-120G
B
A
5461-008
SV4-10-0-6T-120G
B
A
C.P
HFP 2174
DB2296
CI20
LE10
ZDF2215-25-1
LE10
GV10
ZDF2215-25-5

11/21/00
EMDG
SAMPLE PANELS
CRSPM1

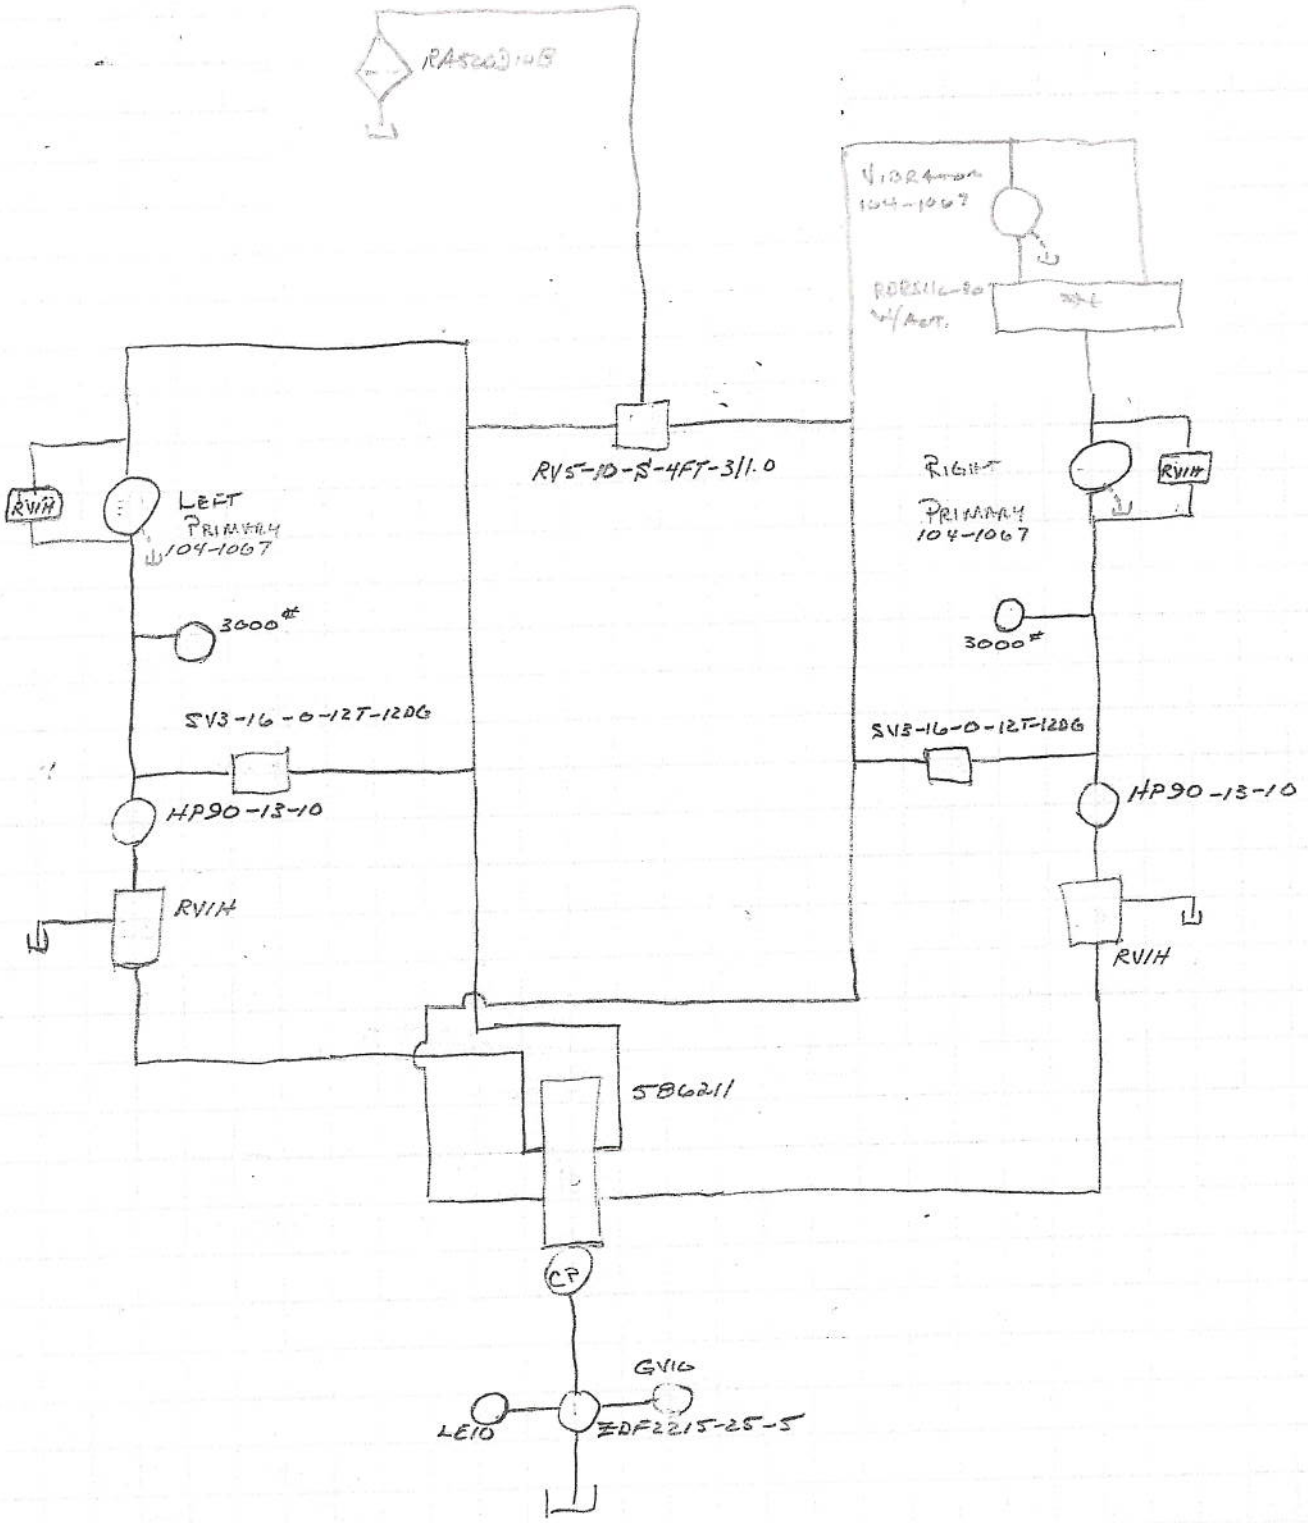

11/21/14
C,406
SACRAFIT POLYMERS
6RSPM1

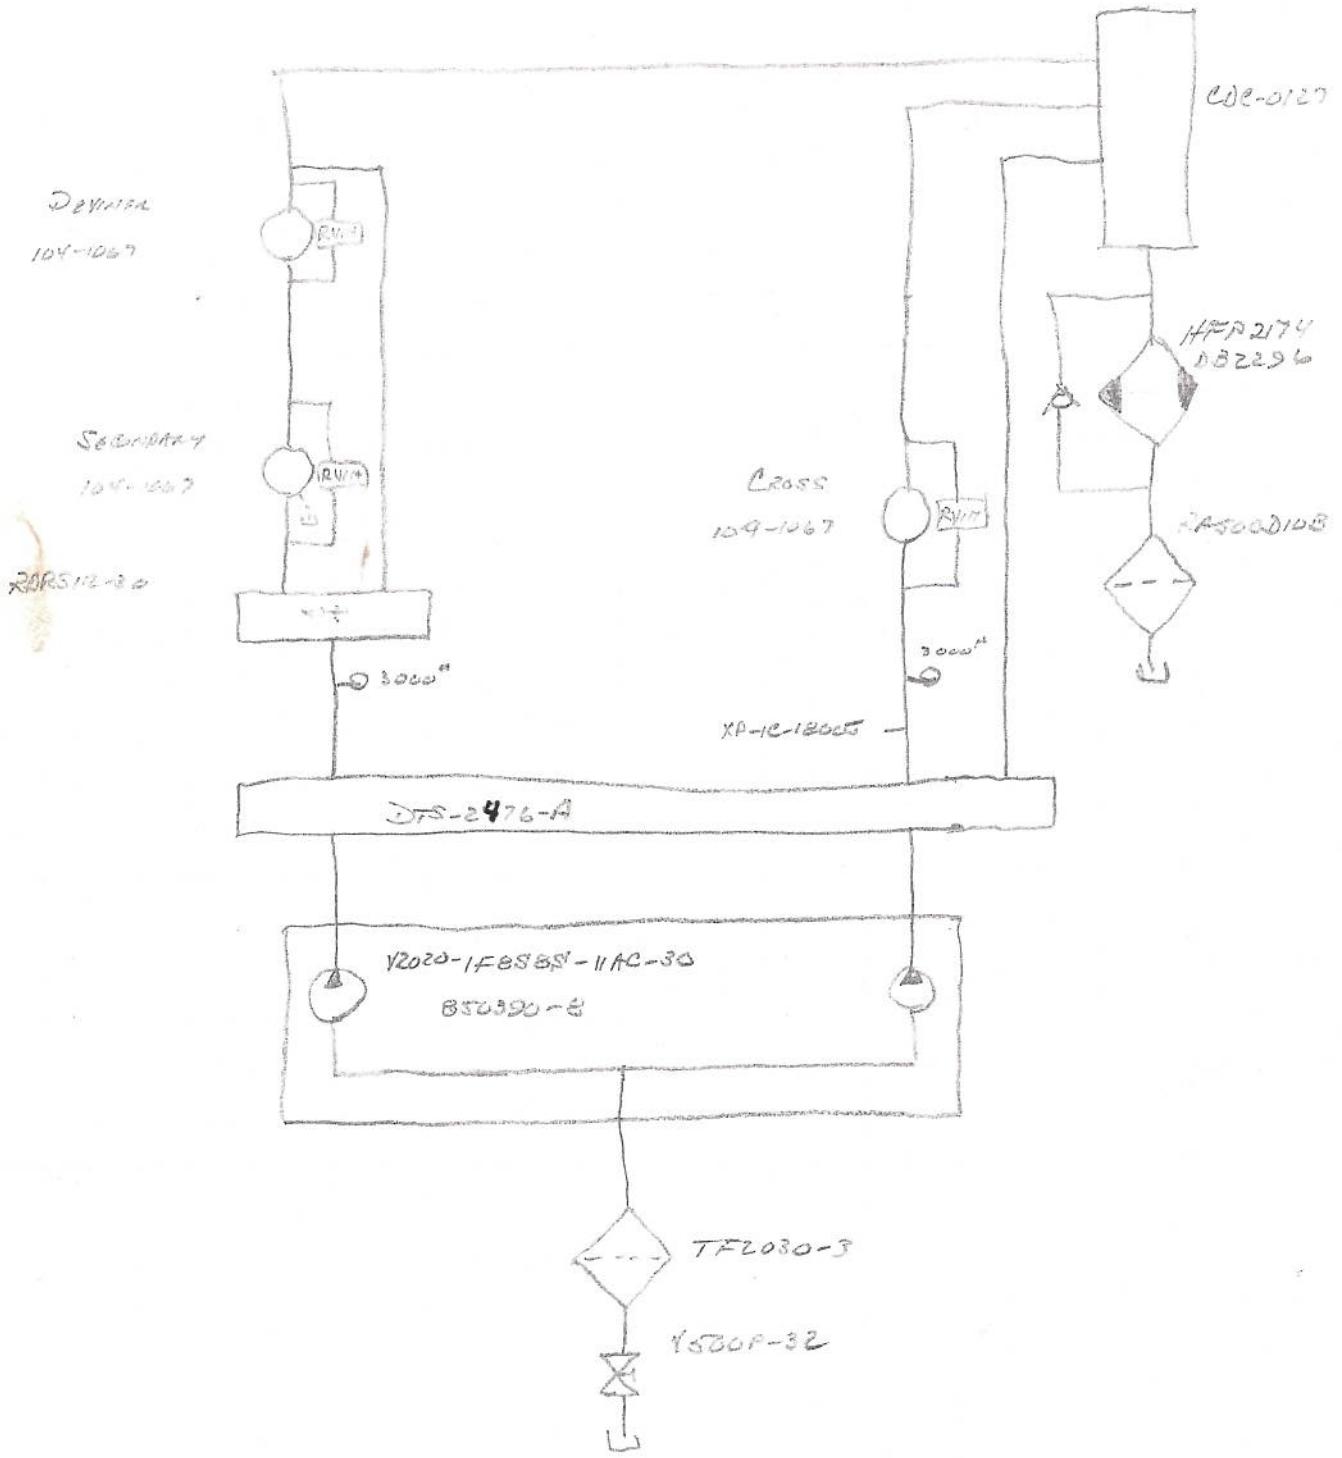

11/21/14

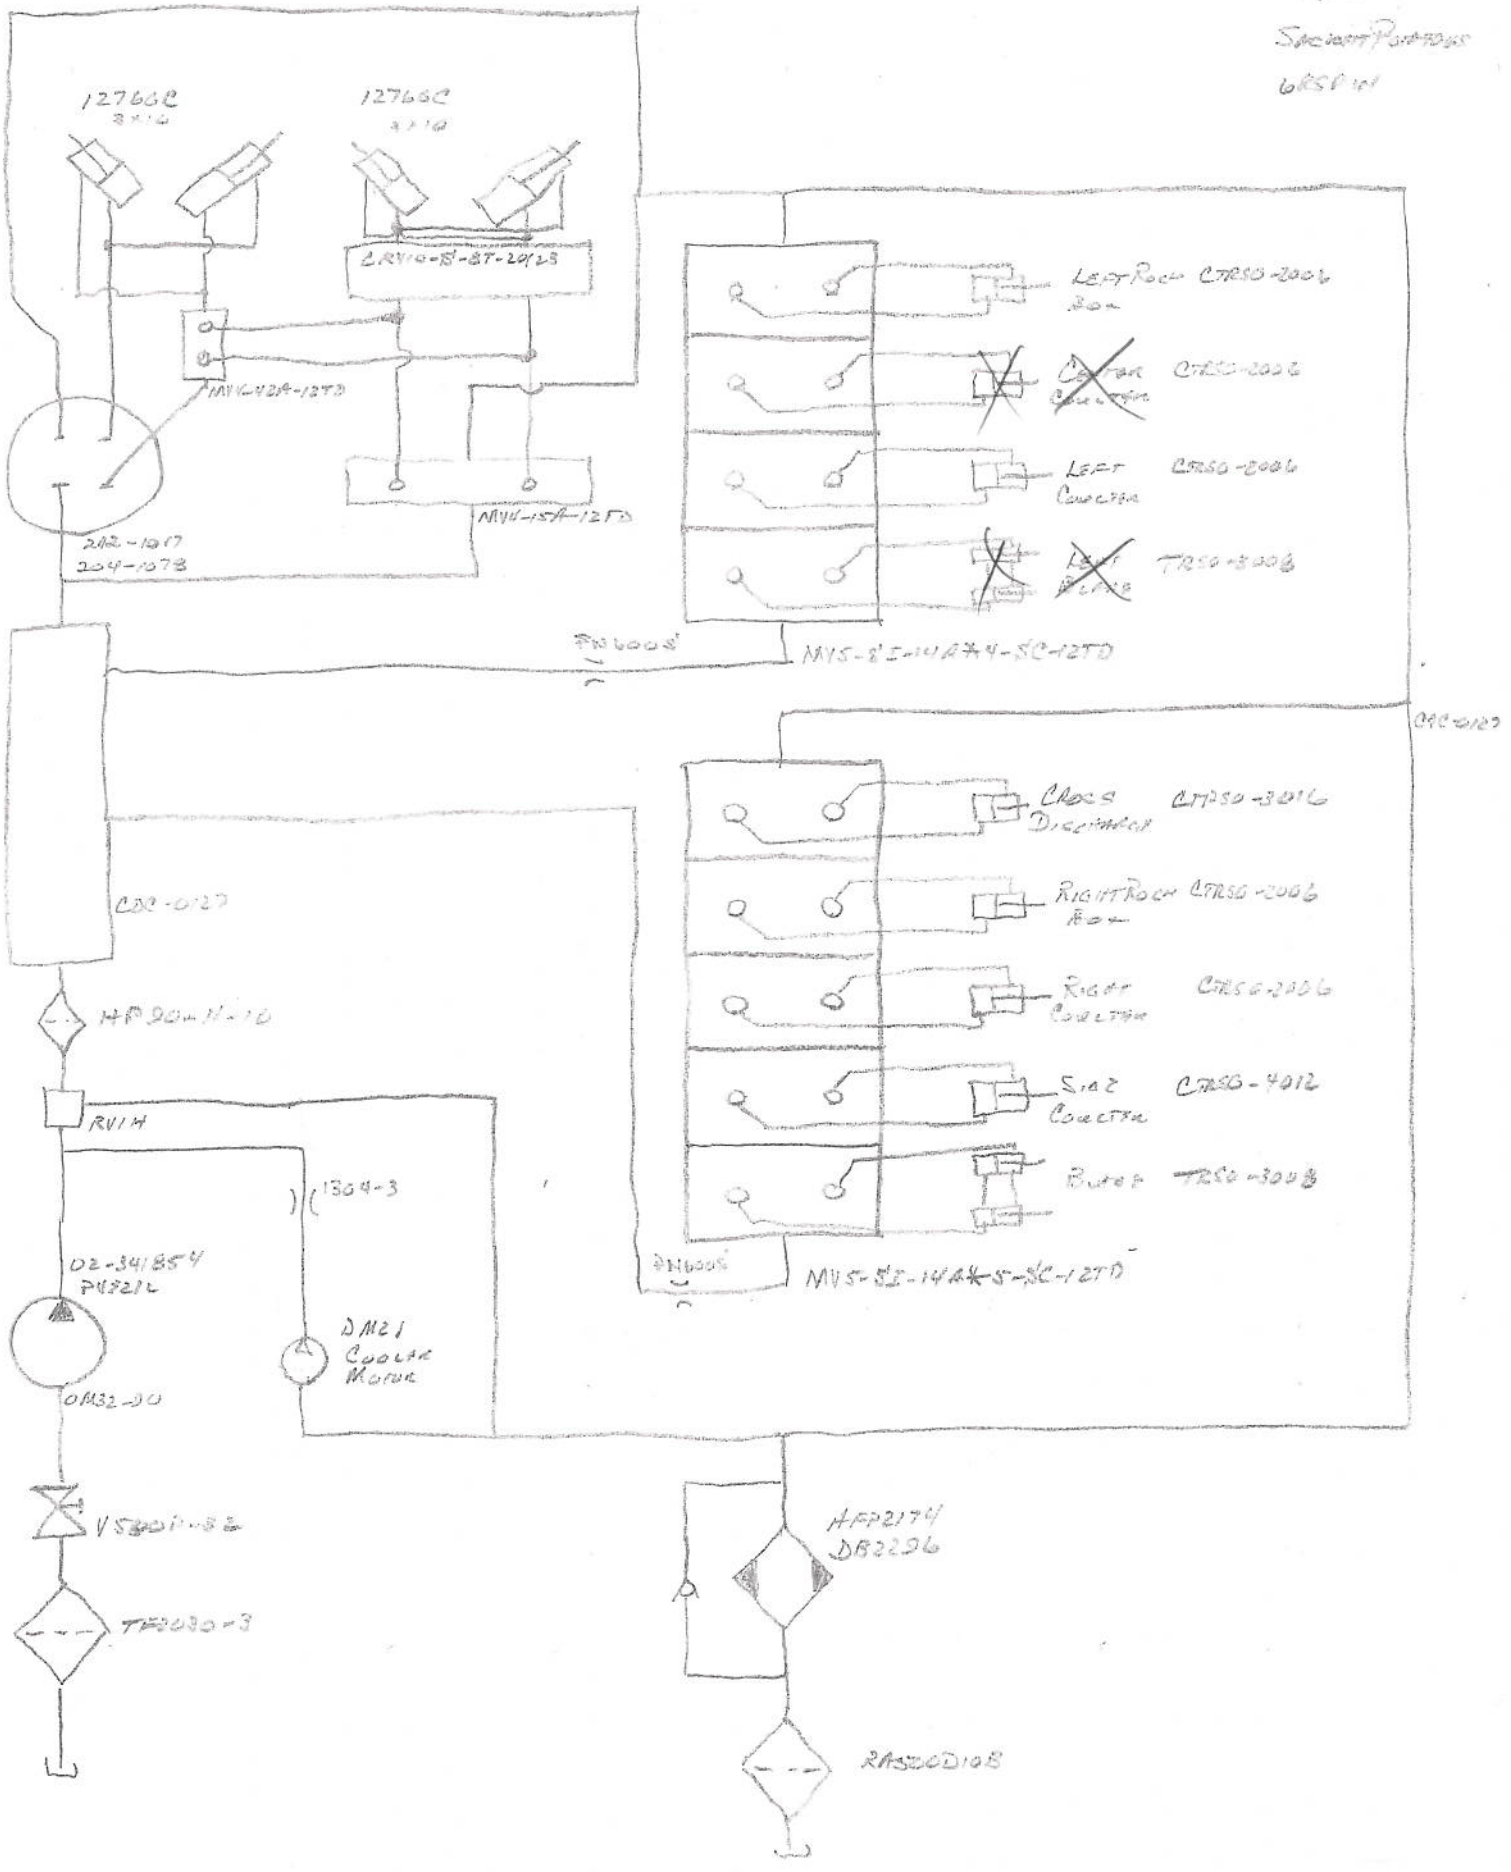
12766C
3x10
12766C
3x10
LRV10-8'-8T-2012B
MV10-12A-12TD
MV10-15A-12TD
202-1017
204-1078
LEFT ROCK CTRSD-2006
BOX
CTRSD-2006
CTRSD-2006
TRSD-3006
MV5-8'-10A74-SC-12TD
CDC-0127
CROSS DISCHARGE CTRSD-3016
RIGHT ROCK CTRSD-2006
BOX
CTRSD-2006
SIAR CTRSD-4012
BUCKET TRSD-3006
MV5-8'-10A45-SC-12TD
HPD20M-N-10
RV1M
1304-3
02-341854
PVB21L
DM21
COOLER
MOTOR
OM32-20
VSB01-82
TB2030-3
HFD2174
DB2206
RASCOD108

11/21/17
#1906
CASCADE
LARSAW

(4")

4"X4" Bush
TF2030-3
2" Cplg N-P
V500P-32
2"X1 1/2" Bush
FT150
* PVE21C

(3")

3"X2" Bush
2" Cplg N-P
V500P-32
2"X1 1/2" Bush
1 1/2" Cplg N-P
SF150-25-1.5
1 1/2" Cplg N-P
V500P-24
1 1/2"X1/4" Bush
FT125
* TAN 5.4/5.4

(2")

(5")

3"X2" Bush
2" Cplg N-P
V500P-32
2"X1 1/2" Bush
1 1/2" Cplg N-P
SF150-25 1/2
1 1/2" Cplg N-P
V500P-24
1 1/2"X1/4" Bush
FT125
* TA1919

(4")

4"X3" Bush
TF2032-3
2" Cplg N-P
V500P-32
FT200
* V2020

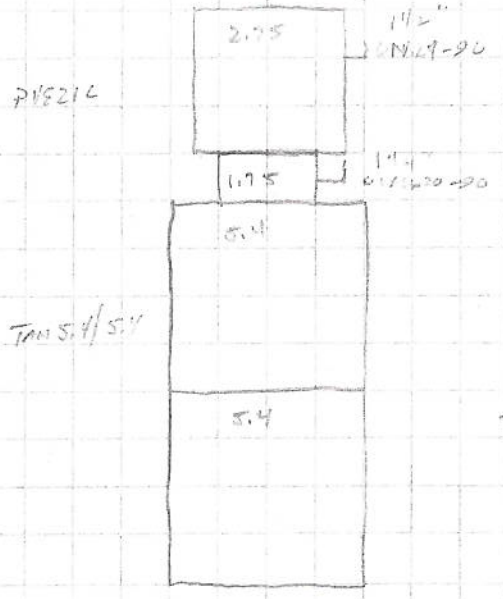

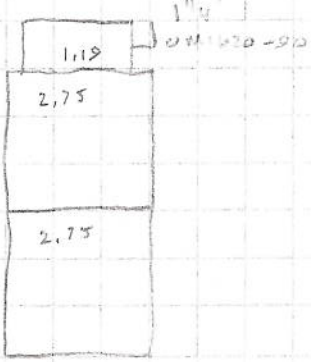

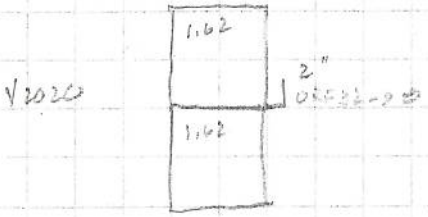

11/21/14
#1406
SAUER PUMPS
6 REPW

TAILE
PVE21L - STEERING PUMP C.D.
546 - 008 - GROUND DRIVE C.D.
COOLER MOTOR REMAN
PVE21L - STEERING PUMP WITH RELIEF
LEFT SIDE MOTOR C.D's
RIGHT SIDE MOTOR C.D's
DTS - 0032
TA1919 - PRIMARY PUMP - C.D.

COOLER
SECONDARY / DIVIDER CIRCUIT
CROSS CIRCUIT
DTS - 2476A BYPASS
STEERING / WORK BRAKE REMANS

D/S CONTROL PANEL

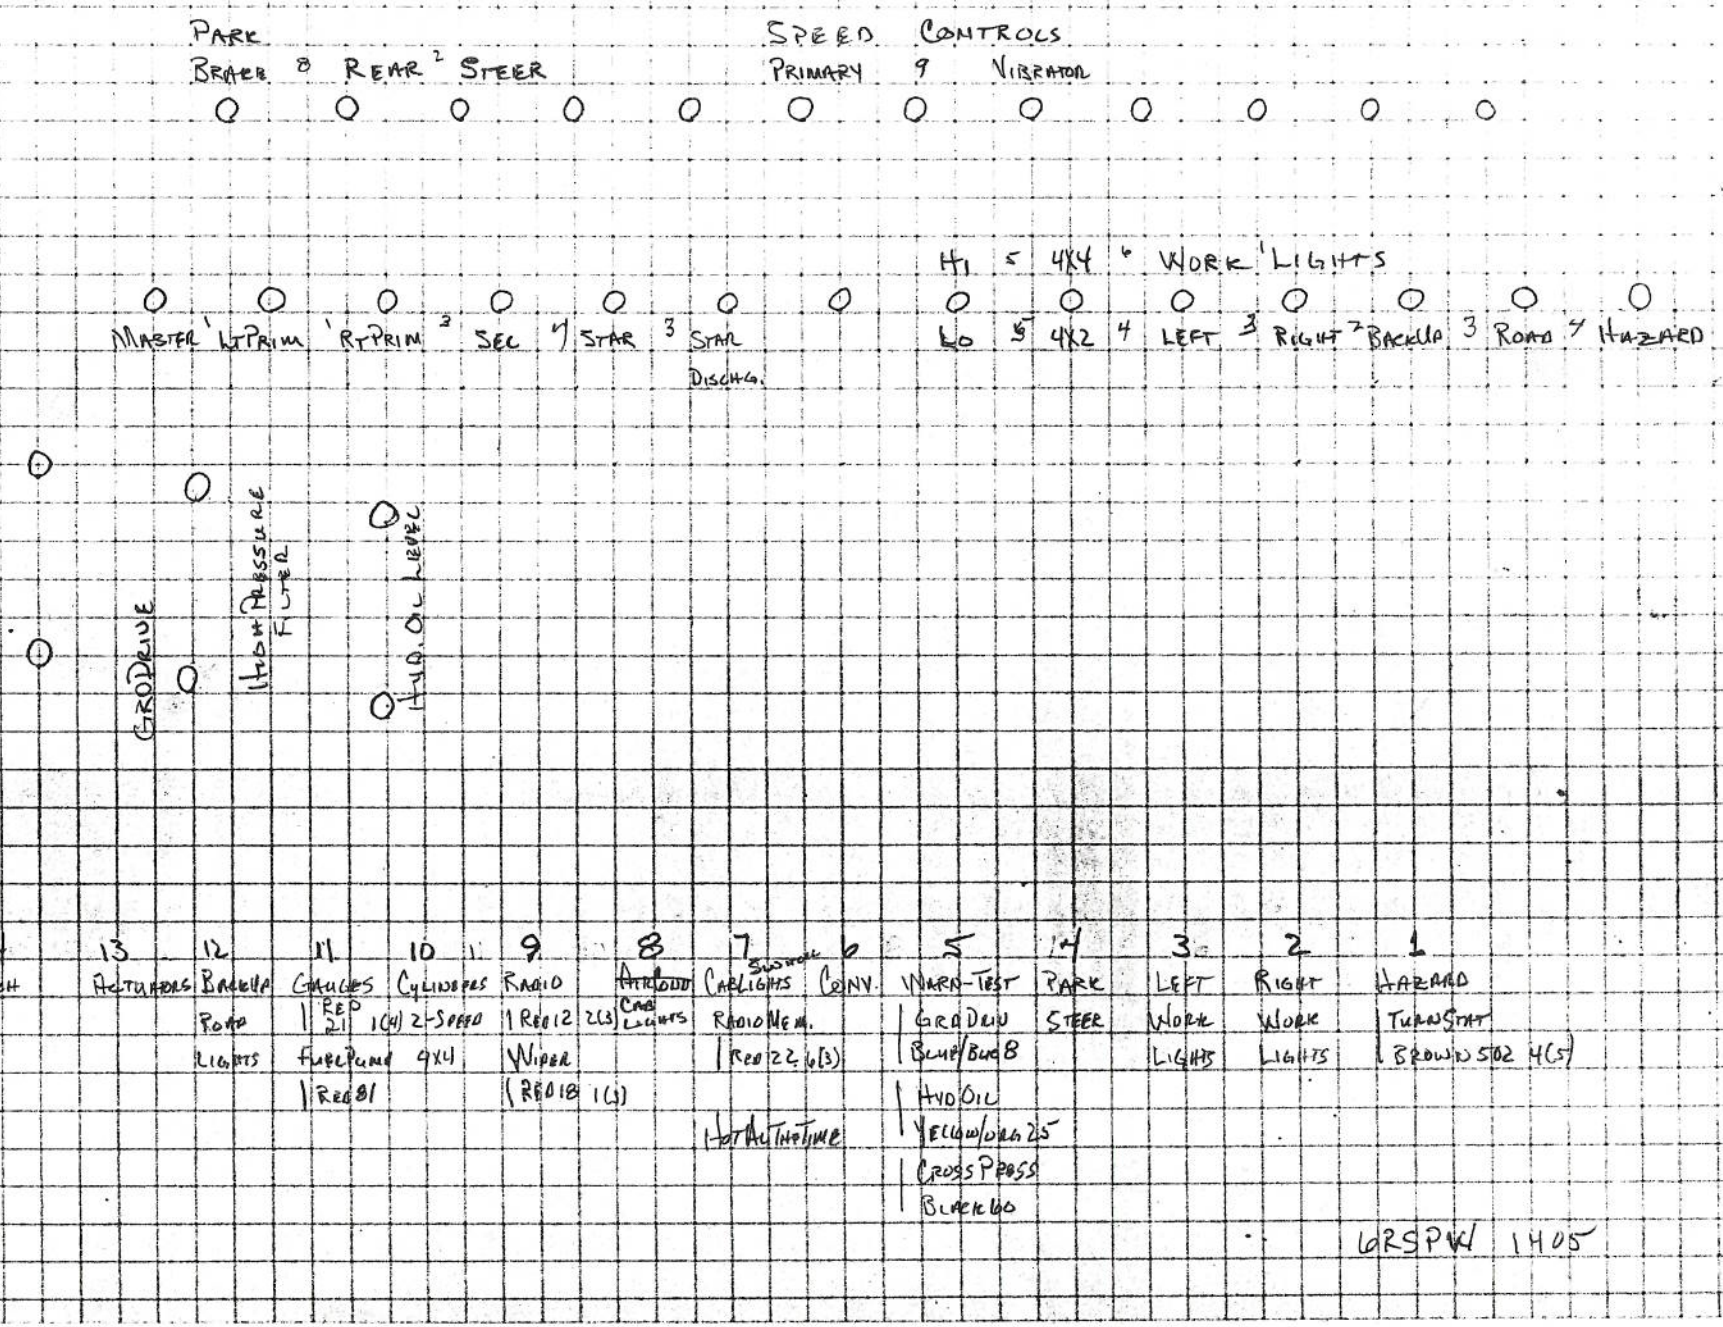

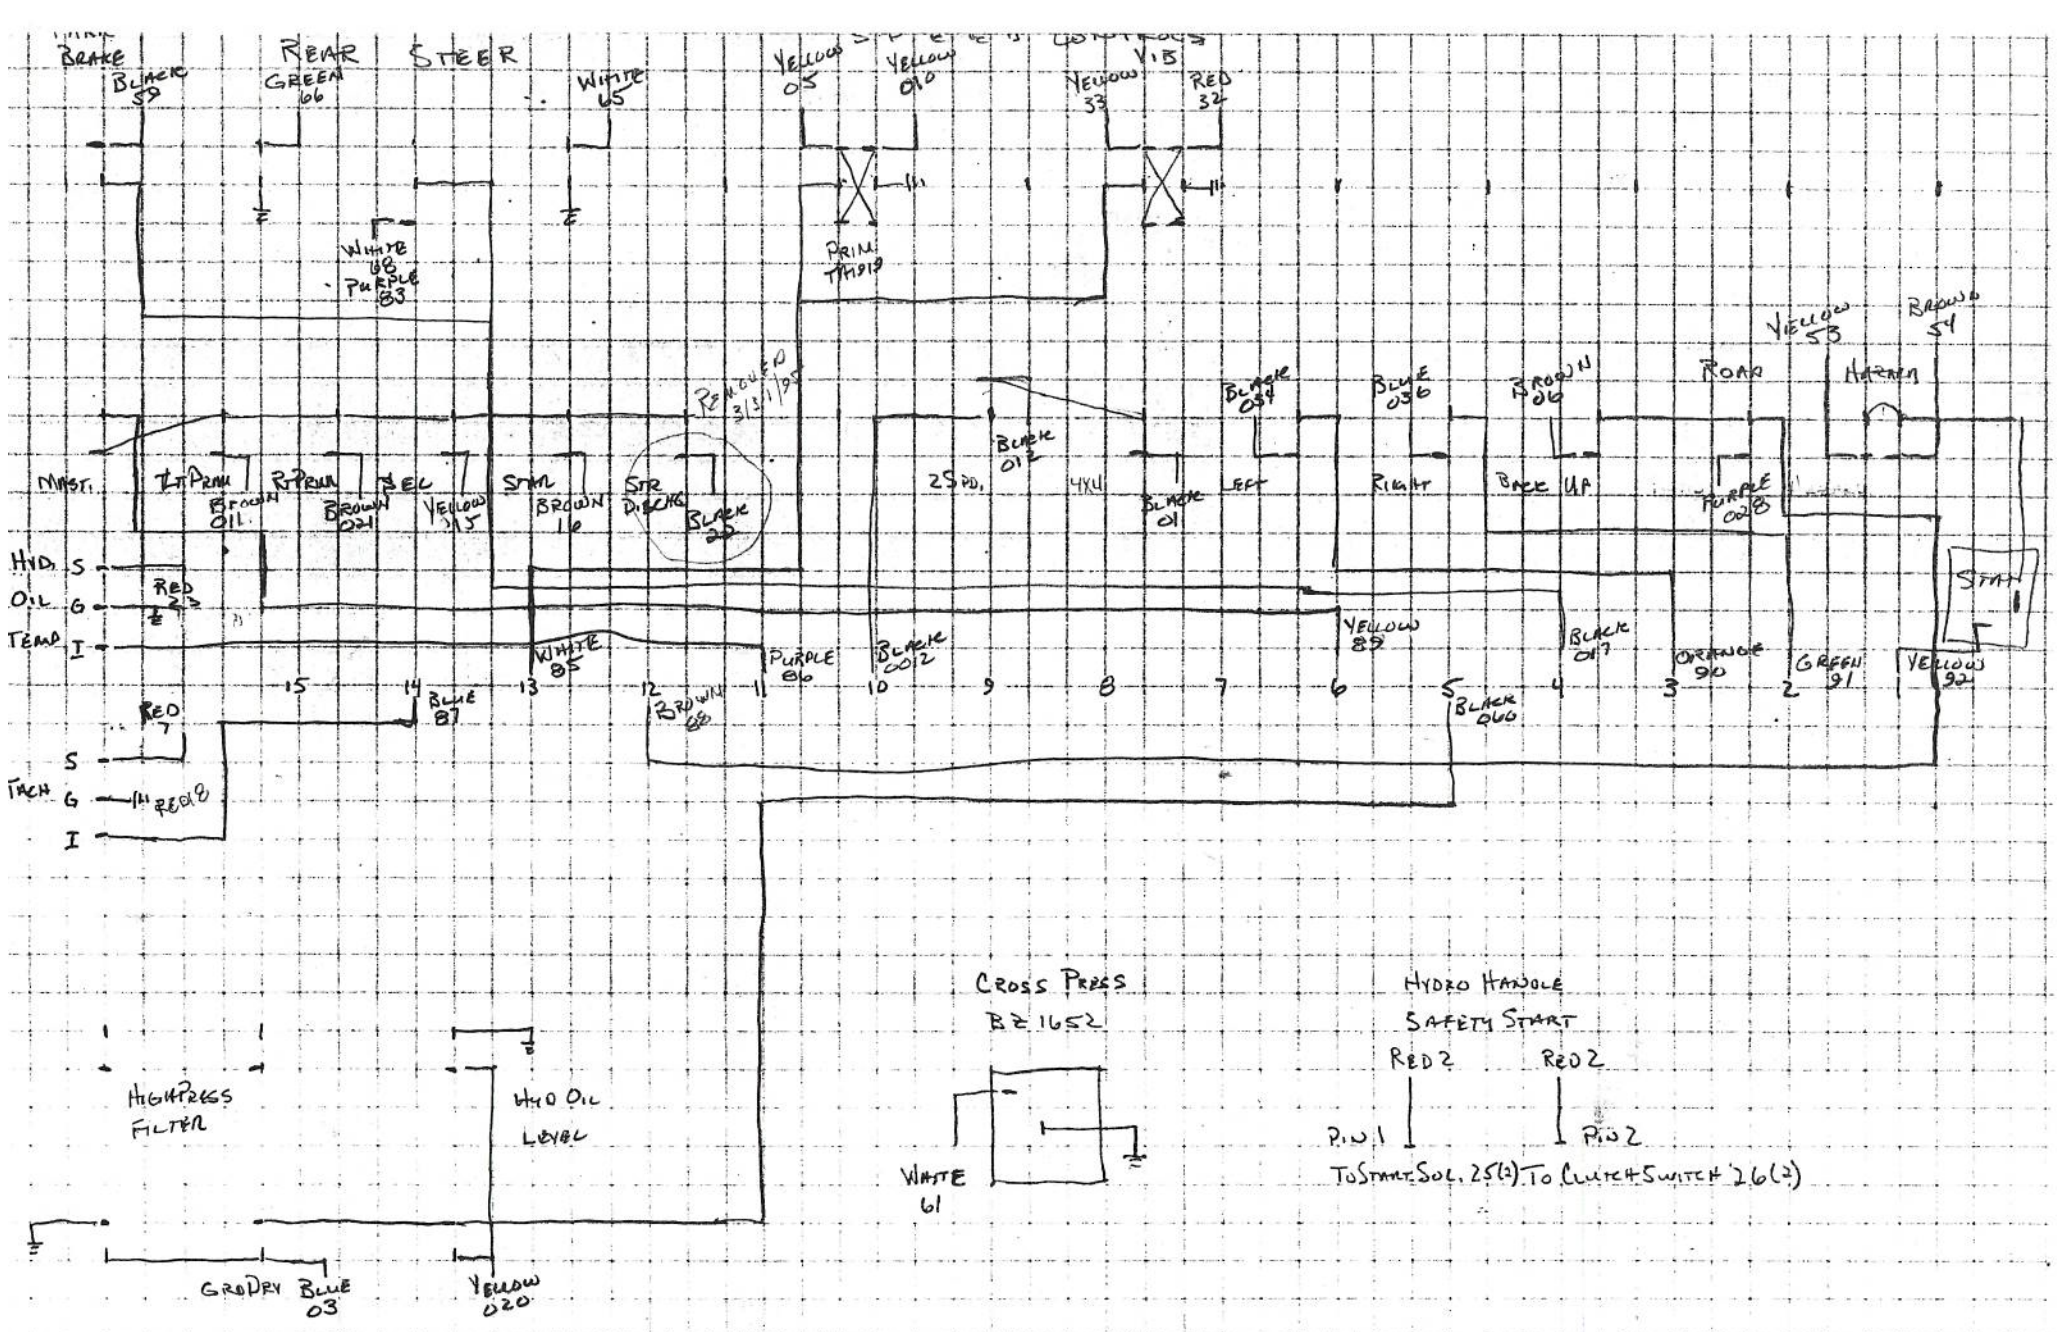

1B	2A	6A	30A	20A *	20A	20A	30A *	30A *	20A *	20A	20A	30A *	30A	30A
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
SPEEDOMETER	TACH	ACT. VLV BELT	BACKUP ROAD LIGHTS	GAUGES RED 21 1(4) FUEL PUMP RED 81	CYLINDERS 2-SPEED 4X4	RADIO RED 12 W/P&R RED 18 1(3)	26(3) PERCOLATOR CAB LIGHTS	CAB LIGHTS SWITCH RADIO MEM. RED 22 L(3) HOT ALL TIME	CONN.	WARN-TEST GRO DRV, BLUE/BLK 8 FAN FCT YELLOW/BLK 10 HYD OIL YELLOW/DEG 25 CROSS PRESS BLACK 60	PARK STEER	LEFT WORK LIGHTS	RIGHT WORK LIGHTS	HAZARD TURN STAT BROWN STOP 4(5)	GRSPW 1405T

LTA-10
6 ROW ST THRU

BLACK	1	X 11	4X4	TO 12(2)
	12 RED	X 11	2-SPEED	TO 13(2)
	17 BLUE	X 11	TO PIN 15(5) BACK SIDE OF 783	
	22 ORANGE			
RED	2 #18 21 IN HANDLE	X 13	TO PIN 25(2) (CLUTCH SWITCH 5(5) TO 26(2) TO HYDRO SAFETY START TO PIN 25(2))	
	7 BLACK	X 11	TACH "S" TO SENDER	TO 5(2)
	18 BLUE	X 11	TACH "G" TO SENDER	TO 6(2)
	23 ORANGE	X 14	HYD OIL TEMP SENDER	TO 4(2)
BLUE	3	X 8	LIGHT TO GRD DRIVE FILT. #3	TO 21(2)
	8 BLACK	X 8	#5 FUSE TO GRD HYDRO FILTER #1 (12VDC)	21(2)
	13 RED	X 14	ST87 "IGN SIDE"	TO FUEL SHUT OFF SOL.
	24 ORANGE	X 16	TO ORANGE 914 IN A/C PLUG (CLUTCH SWITCH)	
ORANGE	4	X 13	"WATER SENDER GAUGE	13(3)
	9 BLACK	X 15	"WATER TEMP LIGHT	12(3)
	14 RED	X 13	OIL PRESS SENDER GAUGE	3(3)
	19 BLUE	X 13	OIL PRESS LIGHT	9(3)
YELLOW	5	X 12	TA 919 ACT.	16(2)
	10 BLACK	X 12	TA 919 ACT.	24(2)
	15 RED	X 21	[illegible] SEC SOL	20(2)
	20 BLUE	X 16	HYD. OIL LEVEL SENSOR	TO BUZZER TO 22(2)
	25 ORANGE	X 16	#5 FUSE TO HYD. OIL LEVEL SENSOR	12VDC
BROWN	6	(20	BACK UP LIGHTS	9(2)
	11 BLACK	X 10	LEFT PRIM.	
	16 RED	X 21	STAR [illegible] SOL.	17(2)
	21 BLUE	X 9	RT. PRIM SOL.	19(2)

WIRE 68" NUMBERS @ 18"

FUSE BOARD TO ARM REST PANEL

PLUG #1

	PIN			
	1	92	YELLOW	#1 FUSE TO HAZARD STAT. TO SWITCH
	2	91	GREEN	2 FUSE TO RIGHT WORK LIGHT SWITCH
	3	90	ORANGE	3 FUSE TO LEFT WORK LIGHT SWITCH
	4	017	BLACK/[illegible]	4 FUSE TO PARK BRAKE SWITCH — BLACK/BLUE
	5	060	BLACK	5 FUSE TO TEST SWITCHES
	6	89	YELLOW	6 FUSE TO [illegible] TO MASTER
	7	84	RED	[illegible]
	8	012	BLACK/[illegible]	10 FUSE TO 2-SPEED, 4X4, CYBERTECH (WHITE) SWITCHES
	9	86	PURPLE	11 FUSE TO IGN ON HYD OIL TEMP GAUGE
	10	88	BROWN	12 FUSE TO BACK UP LIGHT SWITCH - ROAD LIGHT SWITCH
	11	85	WHITE	13 FUSE TO VIBE BELT ACT, VIBE BELT REV, VIB ACT, SIDE ACT. SWITCHES
	12	87	BLUE	14 FUSE TO "I" ON TACH.

ARM REST SWITCHES

F	13	028	PURPLE	[illegible] ROAD LIGHT SWITCH TO RELAY PURPLE 028
	14	27	WHITE	[illegible]
	15	26	BLUE	[illegible]
	16	46	BROWN	[illegible]
	17	45	GREEN	[illegible]
	18	39	WHITE	[illegible]
	19	33	YELLOW	PRIM VIB ACT.
	20	32	RED	PRIM VIB ACT.
	21	70	RED	[illegible]
	22	69	PURPLE	[illegible]
C	23	68	WHITE	REAR STEER SOL.
	24	83	PURPLE	COMMON ON REAR STEER SENSORS

PLUG #2

	1	65	WHITE	REAR STEER SENSOR (LT WHEEL - RT TURN) LIGHT.	
	2	66	GREEN	REAR STEER SENSOR (RT WHEEL - LT TURN) LIGHT	
C	3	59	BLACK	PARK SWITCH TO SLT 8B (BACK SIDE)	
	4	23	RED/[illegible]	HYD OIL TEMP SENSOR	RED/ORANGE
	5	7	RED/[illegible]	TACH "S" TO SENSOR	RED/BLACK
	6	18	RED/[illegible]	TACH "G" TO SENSOR	RED/BLUE
C	F	7 054	BROWN	RIGHT HAZARD SIGNAL	
C	F	8 053	YELLOW	LEFT HAZARD SIGNAL.	
		9 06	BROWN	BACK UP LIGHTS — SWITCH TO LIGHTS	BROWN 06
		10 036	BLUE	RIGHT WORK LIGHTS — SWITCH TO RELAY	BLUE 036
		11 034	BLACK	LEFT WORK LIGHTS — SWITCH TO RELAY	BLACK 034
		12 01	BLACK	4X4	BLACK
		13 012	BLACK/[illegible]	2-SPEED — TO SOLENOID	BLACK/RED
		14 047	PURPLE	[illegible]	
		15 011	BROWN/[illegible]	[illegible] LT. PRIM SOL.	BROWN/BLACK
		16 05	YELLOW	[illegible] TA1912 ACT.	YELLOW 05
		17 016	BROWN/[illegible]	[illegible] STAR SOL	BROWN/RED
WIRED IN WITH STAR ON 3/31/95		18 22	BLACK	[illegible] STAR DISCHARGE WIRED IN WITH STAR ON 3/31/95	BLACK 22
		19 21	BROWN/[illegible]	RT. PRIM SOL.	BROWN/BLUE
		20 15	YELLOW/[illegible]	[illegible]	
		21 03	BLUE	LIGHT TO GRD. HYDRO FILT #1	BLUE
		22 020	YELLOW/[illegible]	BZ1252 SWITCH TO HYD OIL LEVEL SENSOR	YELLOW/BLUE
		23 61	WHITE	BZ1652 TO "N.O." CROSS PRESS SWITCH	

ARM REST SWITCHES

*	PIN 25	2	RED 25(2)	TO STARTER RELAY (HYDRO HANDLE SAFETY START SWITCH)
	26	2	RED 5(5)	TO SIDE OF SL18B (HYDRO HANDLE SAFETY START SWITCH)
	27			
	28			
	29			
	30			
	31			
	32			
	33			
	34			
	35			
	36			
	37			

RED 21	1(4)	GAUGES	FUSE 11
Re RED 8	1	FUEL PUMP	FUSE 11
RED 12	2(3)	RADIO	FUSE 9
RED 18	1(3)	WIPER	FUSE 9
RED 22	6(3)	RADIO MEM.	FUSE 7
BLUE/BLK 8		GRD DRV FILT	FUSE 5
YELLOW/ORG 25		HYD OIL LEVEL	FUSE 5
Rx BLACK 60		CROSS PRESS SWITCH	FUSE 5
BROWN 502	4(5)	TURN STAT	FUSE 1

CAB WIRING PLUG 3 LARGE 16 PIN.

PIN						
* 1	RED	18	POWER TO WIPER		RED	18
2	RED	12	POWER TO RADIO		RED	12
3	PURPLE	705	OIL PRESS GA.	TO SENDER	ORANGE/RED	14
4	BLACK	120	GROUND			
5	BROWN	503	LIGHT SWITCH ROAD POSITION TO RELAY		BROWN	503
6	RED	22	POWER TO DOME, PANEL, LIGHT SWITCH - RADIO MEMORY		RED	22
* 7	BROWN	507	CAB FIELD LIGHT RELAY TO CAB FIELD LIGHTS		BROWN	507
8	YELLOW	755	HYDRAULIC OIL TEMPEATURE WARNING LIGHT			
9	ORANGE	924	OIL PRESSURE LIGHT TO SENDER		ORANGE/BLUE	19
* 10	BROWN	526	CAB ROAD LIGHT RELAY TO CAB ROAD LIGHTS		BROWN	526
11	BLUE	652	FUEL GAUGE TO SENDER		WHITE	58
12	DARK BLUE	653	WATER LIGHT TO SENDER		ORANGE/BLACK	9
13	DARK GREEN	617	WATER GAUGE TO SENDER		ORANGE	4
14	BROWN	504	LIGHT SWITCH FIELD POSITION TO RELAY		BROWN	504
15	RED	19	REMOVE			
* 16	BLUE	206	PARKING BRAKE LIGHT (IP SWITCH)		BLUE	206

* LARGE PINS

SMALL 16 PIN PLUG # 4

PIN						
1	RED	21(4)	TO PIN 4 ON GAUGE PANEL 12VDC			
	HYDRO HANDLE					
2	BLACK				BLACK	108
3	RED				RED	109
4	ORANGE	TILT	SIDE COULTERS		ORANGE	110
5	BLUE	TILT	SIDE COULTERS		BLUE	111
6	BLACK/WHITE	WIPER			WHITE	112
7	RED/WHITE	WIPER			BROWN	113
8	BLUE/WHITE	SPARE	CROSS DISCHARGE		PURPLE	114
9	GREEN/WHITE	SPARE	CROSS DISCHARGE		GREEN	115
10	ORANGE/BLACK	COULTERS			YELLOW	116
11	BLUE/BLACK	COULTERS			BROWN	117
12	RED/BLACK	BLADE			RED	118
13	GREEN/BLACK	BLADE			BLACK	119

WHITE 12VDC HOOK WITH HI-LO 12VDC

WHITE/BLACK - SPARE

Column Plug. #5

Pin #			
1	Red #11	-	ST87 Hot Side
2	12A	-	Fuel Shut Off Sol (8.3 Only)
3	13	-	ST87 "IGN"
4	Brown 502	-	Power From Turn Signal Stat (502 To 507)
C 5	White 104	-	Side Of SL783 To Pin 26 (2) (Red 7 To Starter Sol)
C 6	Blue 206	-	J.D. Brake Switch To Pin 16 (3) (Park Light In Panel)
8	Red 12A	-	To White On Alt. (8.3 Only)
C 14	Black 59	-	Back Side 783 To Pin 3 (2)
15	Black 59	-	Back Side 783 To Clutch & Brake Sol.
16	Black 48	-	Fuse #15 To V+ (Speedometer) Common On Speedometer To Cab Ground
C 18	Brown 522	-	Right Turn Signal - (522 To 512)
C 20	Brown 523	-	Left Turn Signal (523 To 513)
21	Brown	-	Sensor Power Supply "V+"
22	Black	-	Sensor Impulse To "Input A"
23	Blue	-	Sensor Ground To "Common"

Red	11
Blue/Red	13
Red	13
Brown	502
White	104
Blue	206
Blue/Orange	24
Black	59
Black/Blue	17
Black	48
Green	
Brown	54
Yellow	53
Brown	105
Black	106
Blue	107

Speedometer Cab 5
"V+" Black 48 & Brown (105)
"Common" - Green & Blue (107)
"Input A" - Black 106

Gauge Panel Plug. (Overhead)

Pin		
1	Oil Press Ga.	
2	Ground	
3	Internal Lamps	- Hook Into Brown 526 On Dimmer
4	Ignition & Battery	
5	Temp. Ga.	
6	Fuel Ga.	
7	Park Brake	
8	Battery	
* 9	Water Temp. Light	
* 10	Oil Press Light	
11	Trans. Temp.	
12	Oil Temp.	

Purple 705 To Orange/Red 14
Black 20
Red 21 To Fuse #11
Dark Green 617 To Orange 4
Blue 652 To White 58
Blue 206 To J.D. Brake Switch

Dark Blue 653 To Orange/Black 9
Orange 924 To Orange/Blue 19



* 9 To BZ 6562 To Sender



* 10 To BZ 6562 To Sender